

Step 2:

Adjust the 8 **lower connectors (B)** to an angle between 30–60 degrees, also forming a "V" shape.






ASSEMBLY PROCESS

Step 1:

Take a **single wooden rod (F)** and insert its upper end into the circular hole in the middle of the **upper connector (A)**, and its lower end into the circular hole in the middle of the **lower connector (B)**.

Ensure that the "V" angles of both connectors are aligned in the same direction. Align the **upper connector (A)** with the end joint of the wooden horizontal rod at the top of the fence panel, and the **lower connector (B)** with the end joint of the wooden horizontal rod at the bottom of the fence panel.

Press the **spring button** on the wooden horizontal rod with your thumb, then use your palm to firmly push the connector into the rod. This will securely connect the fence panel and the connector.

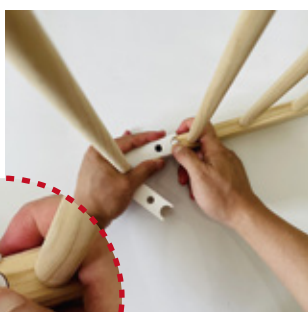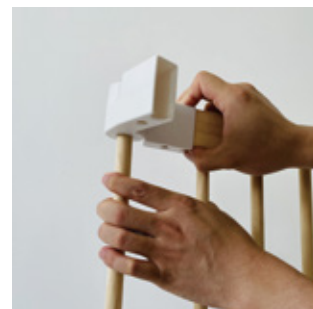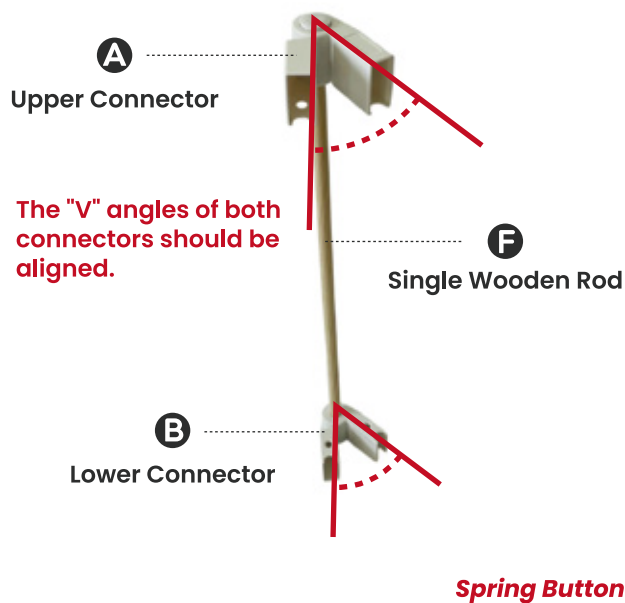

Step 2:

Repeat the above steps to assemble the all the fence panels using the connectors. Make sure to adjust the "V" angle of the connectors as needed. When assembling, arrange the fence panels into a "W" shape. For convenience during assembly, you can adjust the angle of the connectors at any time. **However, ensure that the upper connectors are set to the "ON" mode to allow for angle adjustments; otherwise, the connectors may be damaged.**




 

Step 3:

Adjust the shape of the fence panels according to the space available in your house and your personal preference. Lock the two rotating fasteners in place. **If you do not need to adjust the shape of the fence panels further, use your thumb or a coin to switch the upper connectors to the "OFF" mode.**



Step 4:

For added stability, you can use tools like yoga bricks or thick books to elevate the fence panels, leaving about 1.5 inches of space at the bottom. Locate the screw holes at the bottom of each **fence panel (E)** and install the plastic **suction cups (G)**. This will secure the fence panels to tile or wooden floors.

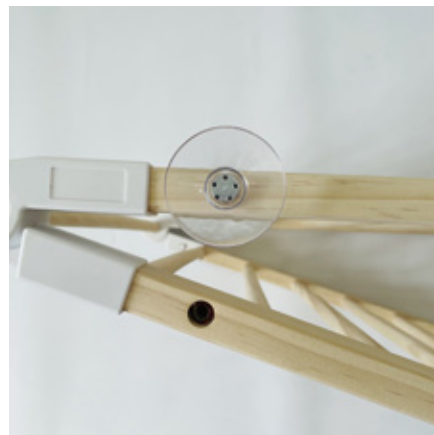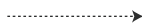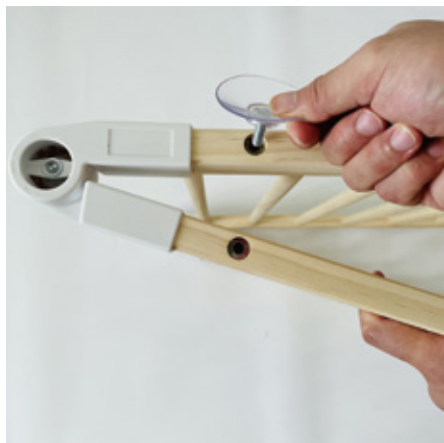

Friendly Reminder

The side of the fence panel with the logo should typically face outward, making it easier for parents to open the wooden gate with their thumb. If you find that the **CONKKA** logo is facing inward after assembly, you can disassemble the fence panel with the gate, reverse its direction, and reassemble it.

If you want to use the wooden playpen as a play gate fixed to the walls:


Step 1:

Mark the appropriate positions on the wall and drill holes. Insert **expansion screw anchors**(**I**) and install 2 **wall mounts**(**H**) for each side.



Step 2:

Disassemble one set of upper and lower plastic connectors from the assembled fence. Attach plastic wall mounts to the horizontal rods at both ends of the fence. Align the plastic wall mounts with the horizontal rods, press the spring buttons on the rods, and push the rods into the wall mounts to secure them.

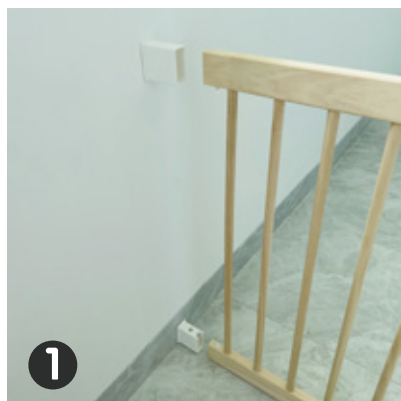

CONKKA, PARENTING WITH HEART AND CREATIVITY!