



Thank You

At Conkka, we believe a child's place to play should be crafted with the same intention you pour into every part of their life. My own path to motherhood—a long IVF journey taught me the profound need for true peace of mind. The desire to create a safe beautiful world for our child become the driving force behind everything we

That's why our playpens are built with sturdy, natural materials for warmth and durability. Our open-design keeps your little one secure while including them in your world, because these precious moments are meant to be shared.

Thank you for letting us be a part of your family's story.
Warmly

Jessica Lau
Founder, Conkka

FOLLOW US:  [Instagram@conkkababies](https://www.instagram.com/conkkababies)
 [YouTube @ConkkaBabies](https://www.youtube.com/ConkkaBabies)

Customer Service : info@conkka.com



ASSEMBLY INSTRUCTIONS

Thank you for choosing the Conkka baby playpen. If you have any questions, please contact us at info@conkka.com.

Ensure all installation parts are kept out of reach of children, and always use the playpen under adult supervision.

📷 [Instagram@conkkababies](https://www.instagram.com/conkkababies)

📺 [YouTube @ConkkaBabies](https://www.youtube.com/@ConkkaBabies)

PACKAGE CONTENTS



A x 8
Upper Connector (10 pcs)



B x 8
Lower Connector (8 pcs)



D x 1
Fence Panel
with Gate (1 pcs)



E x 7
Identical Fence Panel
(7 pcs)



F x 8
Single Wooden Rod
(8 pcs)



G x 16
Suction Cup (16 pcs)



H x 4
Plastic Wall Mount (4 Pcs)



I x 8
Expansion Screw
Set (8 Pcs)

PREPARATION FOR ASSEMBLY

Step 1:

Using your thumb or a coin, press the middle button of the **upper connector** (**A**) and switch from "OFF" to "ON" mode. Do this for all 8 upper connectors. Adjust each connector to an angle of approximately 30–60 degrees, forming a "V" shape.



Using a coin is recommended



Step 2:

Adjust the 8 **lower connectors (B)** to an angle between 30–60 degrees, also forming a "V" shape.




ASSEMBLY PROCESS

Step 1:

Take a **single wooden rod (F)** and insert its upper end into the circular hole in the middle of the **upper connector (A)**, and its lower end into the circular hole in the middle of the **lower connector (B)**.

Ensure that the "V" angles of both connectors are aligned in the same direction. Align the **upper connector (A)** with the end joint of the wooden horizontal rod at the top of the fence panel, and the **lower connector (B)** with the end joint of the wooden horizontal rod at the bottom of the fence panel.

Press the **spring button** on the wooden horizontal rod with your thumb, then use your palm to firmly push the connector into the rod. This will securely connect the fence panel and the connector.

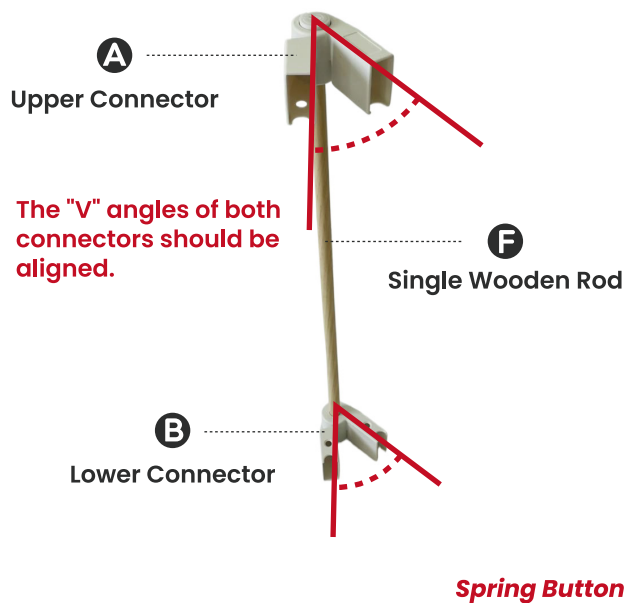


Step 2:

Repeat the above steps to assemble all wood fences. **To fold the playpen easily, alternate the direction of the connectors' circle buttons, setting one outward and the next inward.** The playpen can only be fully folded when the fences are arranged in a "W" shape, which is only possible when nearby connectors have their buttons facing different directions. Ensure all upper connectors are set to "On" when you adjust the playpen angles.



Set the panels as a "W" shape. Set one connector facing inward and the next one facing outward.




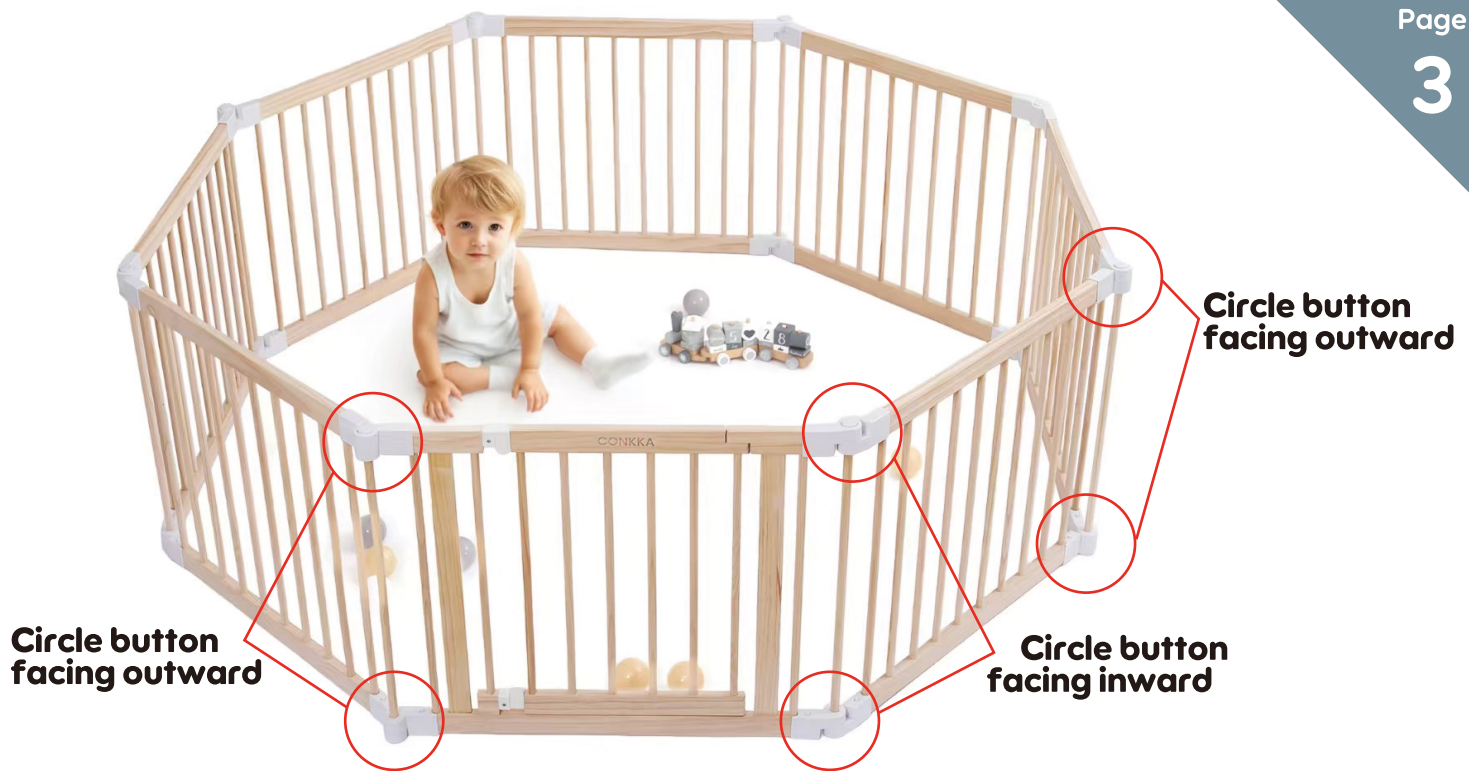


Step 3:

Adjust the shape of the fence panels according to the space available in your house and your personal preference. **If you do not need to adjust the shape of the fence panels further, use your thumb or a coin to switch the upper connectors to the "OFF" mode.**

Step 4:

For added stability, you can use tools like yoga bricks or thick books to elevate the fence panels, leaving about 1.5 inches of space at the bottom. Locate the screw holes at the bottom of each **fence panel (E)** and install the plastic **suction cups (G)**. This will secure the fence panels to tile or wooden floors.

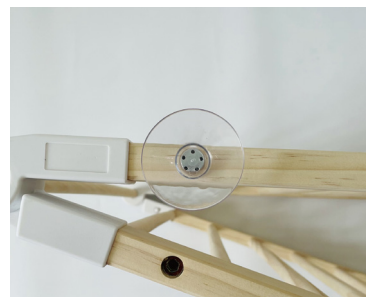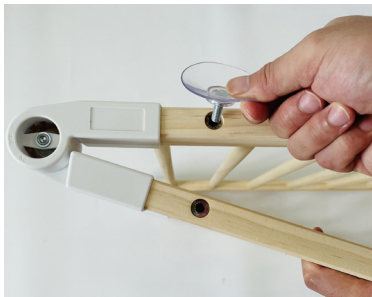

Step 5:

Enhance Stability with Double-Sided Tapes

If the suction cups do not provide sufficient grip on your floor, use the provided double-sided tapes for added security.

To apply:

Clean and dry the application area.

Apply the tape either to the bottom of the connectors or directly onto the wooden fence.

Press firmly to stick the playpen to the floor.

Wait 48 hours for the adhesive to fully bond before testing the stability with a gentle push.



The tape peels off easily. For your safety, please test a small piece on an inconspicuous area of your floor first to ensure it doesn't cause any damage or leave a residue.

If you want to use the wooden playpen as a play gate fixed to the walls:


Step 1:

Mark the appropriate positions on the wall and drill holes. Insert **expansion screw anchors**(**I**) and install **2 wall mounts**(**H**) for each side.



Step 2:

Disassemble one set of upper and lower plastic connectors from the assembled fence. Attach plastic wall mounts to the horizontal rods at both ends of the fence. Align the plastic wall mounts with the horizontal rods, press the spring buttons on the rods, and push the rods into the wall mounts to secure them.

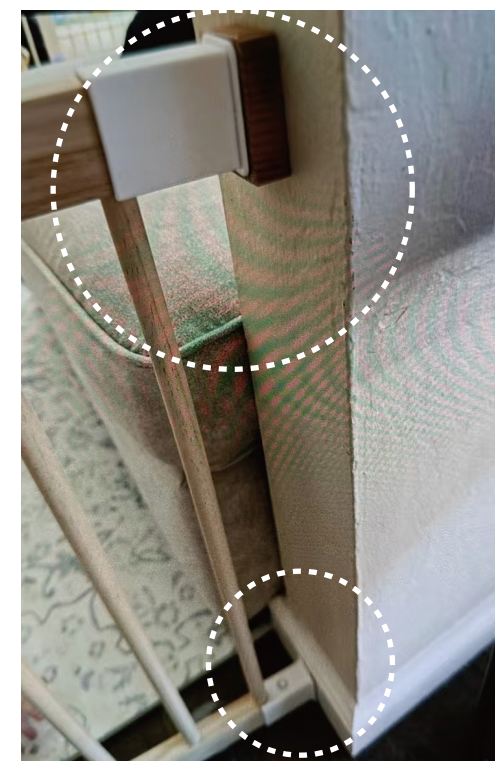

To request spacers for wall mounting,
email: info@conkka.com